

Installation & CARE

SPEC-D
Tuning






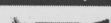
INNOVATE PROFESSIONAL SERVICE

2015 FORD F150 PROJECTOR HEADLIGHTS INSTALLATION

BEFORE INSTALLATION


- If you experience any difficulties that the instruction did not cover, please seek assistance at local automotive shop.
- Please wear protection before you work on any vehicle.
- An assistant is useful when removing the front bumper from your vehicle.
- Please be cautious when working with the bumper or any parts belonging to the vehicles's body to prevent scratching.
- Do not make direct contact with the halogen bulbs or the wire assembly until the unit has cooled down after use.

TOOLS AND SUPPLIES REQUIRED


Ratchet	7 mm socket	10 mm socket	Flathead screwdriver
			
8 mm socket	Plastic Pry bar		
			

PRODUCT NUMBER

2LHP-F15015JM-TM
2LHP-F15015G-TM
2LHP-F15015-TM

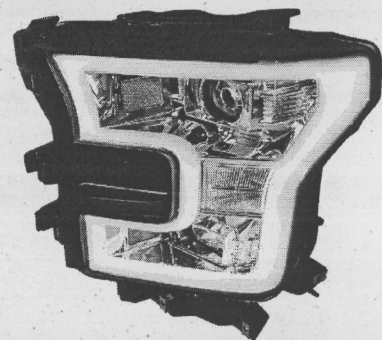


LET'S START THE INSTALLATIONS

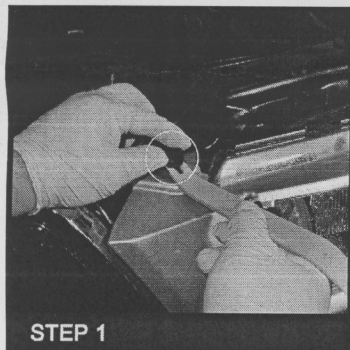


STEP 1

Remove the headlight trim fastener

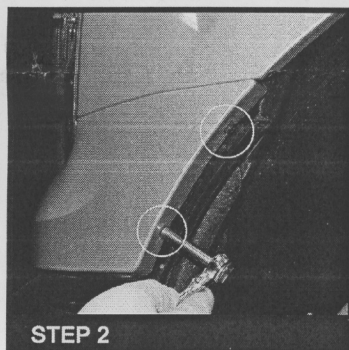


STEP 2

Remove (2) 7mm headlight trim bolts

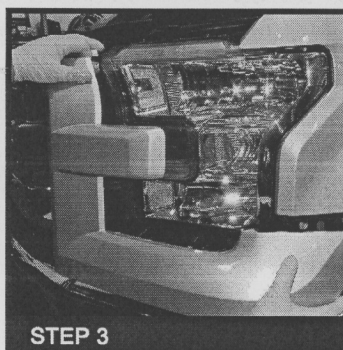

STEP 3

Remove the headlight trim

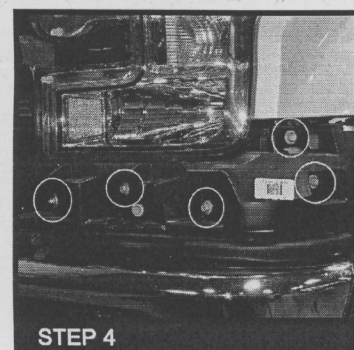


STEP 4

Remove (1) 8mm bolt and (5) 10mm headlight bracket bolts




STEP 5

Remove the headlight bracket fastener in the wheel well

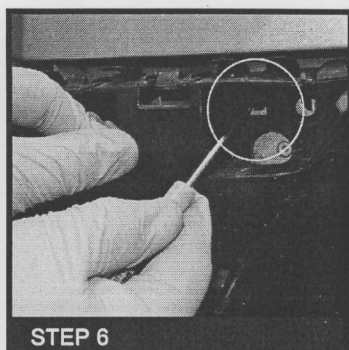

STEP 6

Press down retaining clip with flathead screwdriver to loosen bracket

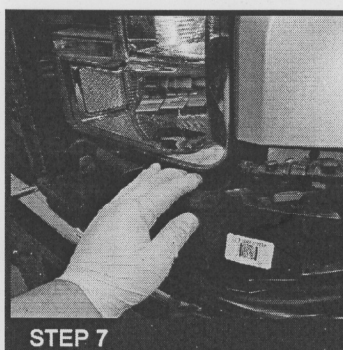


STEP 7

Gently pry and loosen headlight bracket




STEP 8

Remove (1) 10mm front headlight bolt deep behind grille

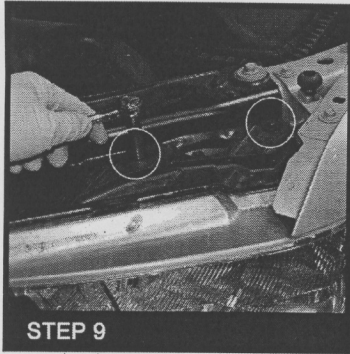


STEP 9
Remove (2) 10mm upper headlight bolts

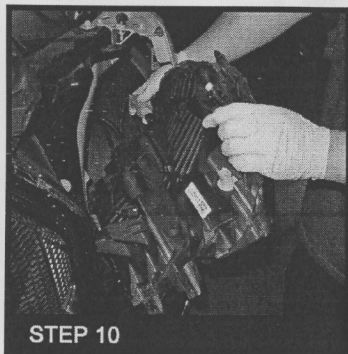


STEP 10
Remove the headlight housing and disconnect the sockets and connectors




STEP 11
Remove the parking light socket

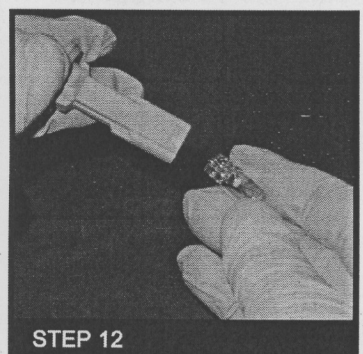


STEP 12
Remove the parking light bulb

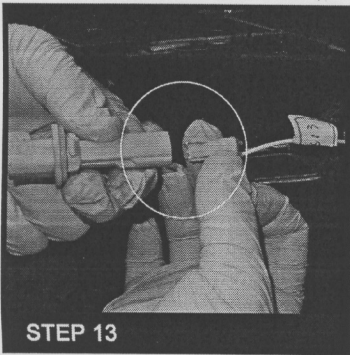


STEP 13
Attach the LED connector to the parking light socket

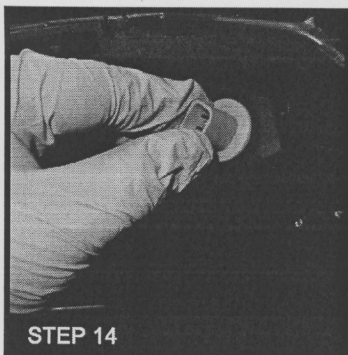

STEP 14
Secure the parking light socket onto LED headlights

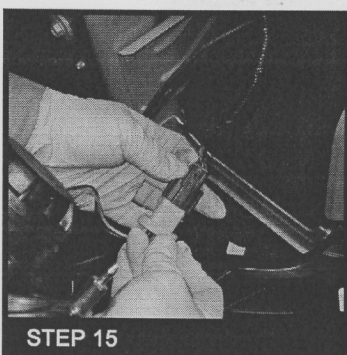


STEP 15
Connect the main light connector to the projector headlight housing

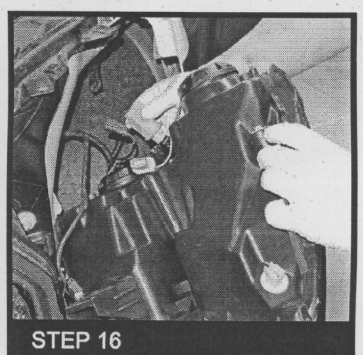


STEP 16
Secure all the connectors and sockets to the LED headlight housing




STEP 17
Secure the headlight housing

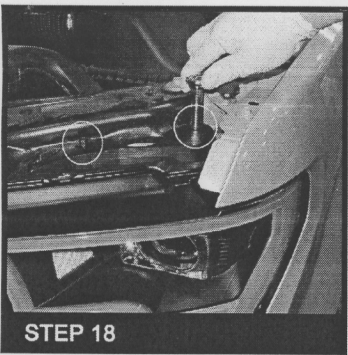


STEP 18
Reinstall (2) 10mm upper headlight bolts

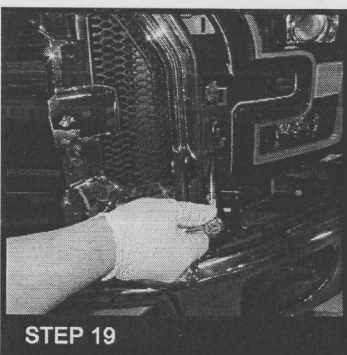


STEP 19
Reinstall (1) 10mm front headlight bolt deep behind grille

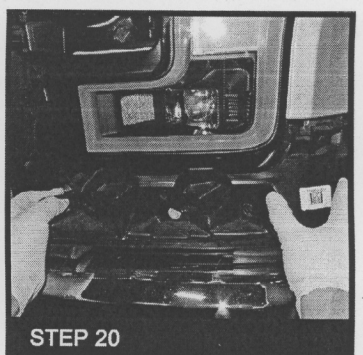


STEP 20
Secure the headlight bracket back into the original position

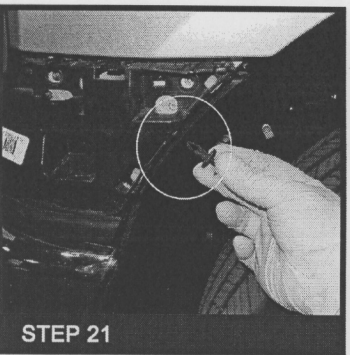


STEP 21
Secure the headlight bracket fastener

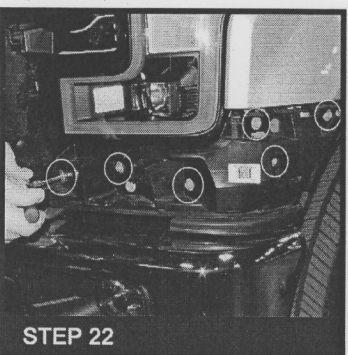

STEP 22
Reinstall (1) 8mm and (5) 10mm bracket bolts

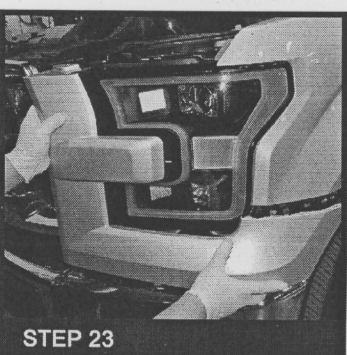

STEP 23
Reinstall the headlight trim bolts

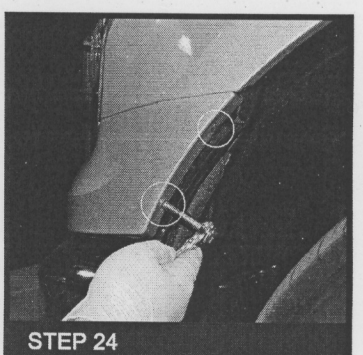


STEP 24
Reinstall (2) 7mm headlight trim bolts



STEP 25

Secure the top headlight trim fastener

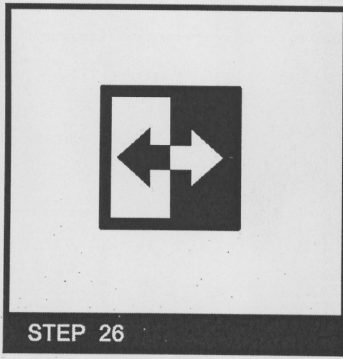

STEP 26

Please repeat the steps from 1 to 25 for the opposite side



The installation is now complete