

# AMERICAN MUSCLE GRAPHICS


## Wrapping Cast Instructions

### Prep:

Clean car well to ensure good adhesion of the decal. Fill a spray bottle with a mixture of water and soap (we use baby shampoo), about 4 large drops per 32 oz. spray bottle of water. Be sure to install decal out of direct sunlight. Also having someone to assist you if you can is very helpful. It may be necessary to separate multiple decals on one sheet by cutting with scissors.


### Step 1:

Spray car with a generous amount of the soap and water mixture.

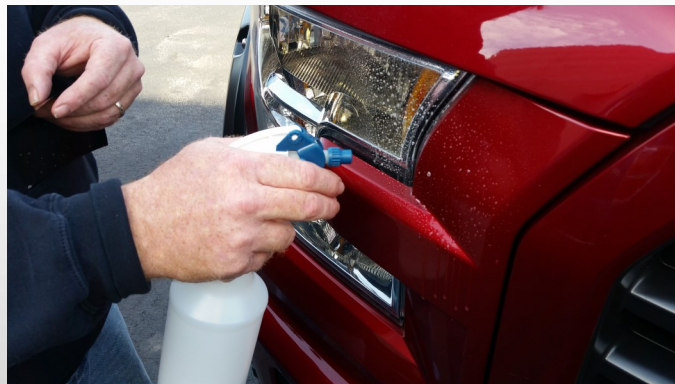

### Step 2:

Peel backing from insert exposing the adhesive. Also spray back of decal as your peeling the backing paper off.

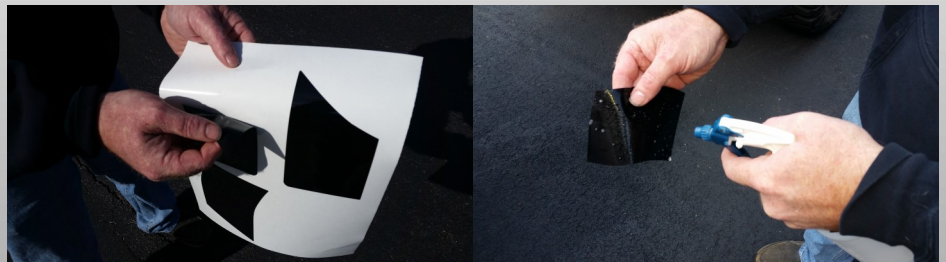

**Step 3:**

Place decal on the car. You will be able to maneuver the insert into position because of the soap and water solution you sprayed on earlier.



**Step 4:**

Squeegee out the water from underneath the decal with a squeegee (*covered in a cloth that will not scratch the vinyl and keep the vinyl wet*).



**Step 5:**

Use a hair dryer when needed to help the vinyl conform to the surface and help dry the underneath so the vinyl can stay in position. Once the vinyl has conformed to the shape of the car let it cool, holding it for a moment.

Leave several hours, depending on climate, of dry time before cleaning car. Use a quick detailer in a spray bottle for the initial cleaning then hand wash car waiting at least several days for the first time after drying. ***Do not power wash vinyl or wax vinyl.***

***In these instructions a hood is pictured but the process is similar for other products***