

VEHICLE ARMOR<sup>™</sup>

# Long John Mud Flaps Installation Instructions



Long John Mud Flap Driver's Side (1)

#### PACKAGE CONTENTS:

2 - Universal Mud Flaps

- 16 SS Self Drilling Screws
- 16 SS Washer





Long John Mud Flap Passenger's Side (1)

### **RECOMMENDED INSTALLATION TOOLS :**

- Power Drill with 1/8" and 1/4" drill bits
- 1/4" Socket with Drill Attachment
- 7/16 Wrench or Socket/Driver

## VEHICLE PREPARATION:

Your vehicle's fender mounting area should be cleaned prior to the installation of your new HuskyLiners Long John Mud Flaps.



#### Installation

Read all directions thoroughly prior to the installation of your Long John Mud Flap.



1. Clean the mounting location on your vehicle and check the location of factory fasteners and factory holes that can be used to fasten the mud flap. We recommend using the factory locations when possible then use the provided SS self tapping screws for further retention.



- 2. Align the outer edge of the mud flap with the outer edge of the tire to get maximum coverage, protection and for easy alignment.
- Note: These are general mounting guidelines and the Long John mud flaps can be mounted in many different ways to provide whatever coverage you deem necessary.




3. Transfer the factory hole locations to the mud flap mounting area. Mark the factory fasteners and other fastening locations with a small ball of clay or similar material.

4. Align the mud flap so the bottom of the flap is parallel to the ground and at your desired height. Press the mud flap firmly against the fender to transfer the fastening locations.



5. Drill fastening holes at the pre-marked locations in the mud flap to accommodate factory fastener size. If using supplied SS self drilling screws, drilling a small 1/8" pilot hole may help to ease installation.

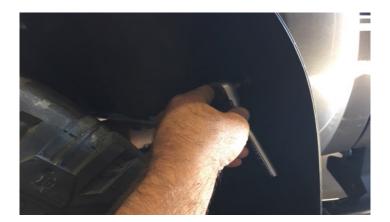

6. Fasten the mud flap to the truck with the factory fasteners. Make sure the mud flap is parallel to the ground before tightening.



7. Install the SS self drilling screws at the other pre-drilled locations on the mud flap.

A minimum of 4 fastening locations per mud flap is recommended.



9. Repeat steps 1-7 on the opposite side of the vehicle.

Congratulations,

You have now successfully installed your new Husky Liners Long John Mud Flap. If you have any questions please call us at 1-800-344-8759.

# HUSKY LINERS LONG JOHN MUD FLAP LIMITED LIFETIME WARRANTY

WINFIELD CONSUMER PRODUCTS WARRANTS YOUR HUSKY LINERS MUDGUARD WITH A LIMITED LIFETIME WARRANTY TO THE ORIGINAL PURCHASER. IF YOUR FINISHED PRODUCT IS FOUND DEFECTIVE, WINFIELD CONSUMER PRODUCTS WILL AUTHORIZE THE REPLACEMENT OF YOUR PRODUCT AT NO CHARGE TO THE ORIGINAL PURCHASER. THIS WAR-RANTY COVERS PRODUCT REPLACEMENT ONLY. WINFIELD CONSUMER PRODUCTS WILL NOT PROVIDE A MONETARY REFUND FOR THE PRICE OF THE PRODUCT OR CHARGES INCURRED DURING INSTALLATION. THIS WARRANTY IS NOT TRANSFERABLE. WINFIELD CONSUMER PRODUCTS ASSUMES NO LIABILITY FOR PRODUCT FAILURE DUE TO ACCIDENT, COLLISION, NEGLIGENCE, VANDALISM OR ABUSE.

THERE IS NO WARRANTY OF MERCHANTABILITY AND NO WARRANTY THAT THE PRODUCT SHALL BE FIT FOR ANY PARTICU-LAR PURPOSE OR USE. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY HAVE OTHER RIGHTS WHICH VARY FROM JURISDICTION.

THIS PRODUCT IS TO BE USED IN COMPLIANCE WITH ALL APPLICABLE STATE OR PROVINCIAL LAWS. INSTALLATION OF THIS PRODUCT IN A MANNER THAT VIOLATES STATE OR PROVINCIAL LAW IS A MISUSE OF THE PRODUCT AND VOIDS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTY OF MERCHANTABILITY. WINFIELD CONSUMER PRODUCTS SHALL NOT BE LIABLE IN ANY MANNER WHATSOEVER FOR DAMAGES RELATED TO THE USE OF THIS PRODUCT IN AN ILLEGAL MANNER.

FOR WARRANTY SERVICE CONTACT YOUR HUSKY LINERS DEALER OR CALL WINFIELD CONSUMER PRODUCTS AT (800) 344-8759.