

2009-2014 Ford F-150 Ford Emblem Installation

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-357-9261
Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)

Contact your PUTCO dealer for other quality accessories.

Please read all instructions before installation and to check to see that all parts are included.

KIT CONTENTS: 92100	
Description	Qty.
Medium Ford Emblem	2
Bolt Kit	1
KIT CONTENTS: 92200	
Medium Ford Emblem	1
Small Ford Emblem	1
3M Ford Emblem Tape	1
Bolt Kit	1
Alcohol Pad Packet	1

Tools Needed:

- 3/8" Ratchet
- 10mm and 3/8" Socket
- 3/8" Wrench
- Needle Nose Pliers
- Flat Blade Screwdriver
- T-30 Torx Bit (92100 only)

Front Emblem Installation

1. Remove Emblems from packaging. Check to see if all parts from above kit contents table are included.

2. Open hood, Remove two 10mm nuts and that secure the emblem to the hood. Shown in figure 1.1

3. Unclip the two shafts that held the two 10mm nuts but gently pushing upwards on them and pulling the emblem off the grille.

4. Install the provided threaded shafts into the back of the new emblem by hand until shafts bottom out in emblem.

5. Install the emblem into the grille and finish the installation by installing the washers and tightening the lock nuts using a 3/8" socket and ratchet. Be careful not to over tighten the fasteners and damage the surrounding grille

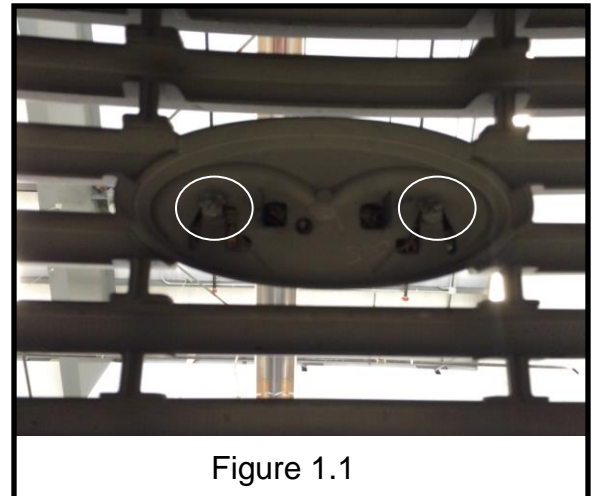


Figure 1.1

LIMITED 90 DAY WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.

Rear Emblem Installation Kit: 92100

1. Lower tailgate and remove the 13 T-30 screws holding the plastic tailgate protector marked in figure 2.1
2. Remove the protector
3. Locate and remove the two 10mm screws holding the rear emblem on
4. Unclip the two shafts that held the two 10mm nuts but gently pushing upwards on them and pulling the emblem off the tailgate

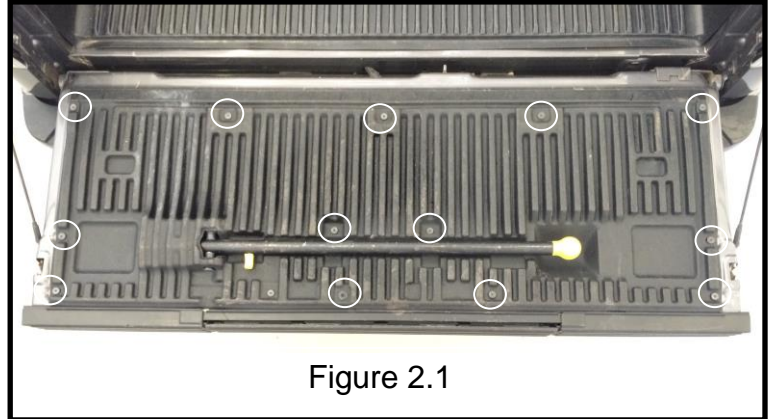


Figure 2.1

5. Install the provided threaded shafts into the back of the new emblem by hand until shafts bottom out in emblem.
6. Install the emblem into the tailgate and finish the installation by installing the washers and tightening the lock nuts using a 3/8" socket and ratchet. Be careful not to over tighten the fasteners and damage the tailgate.

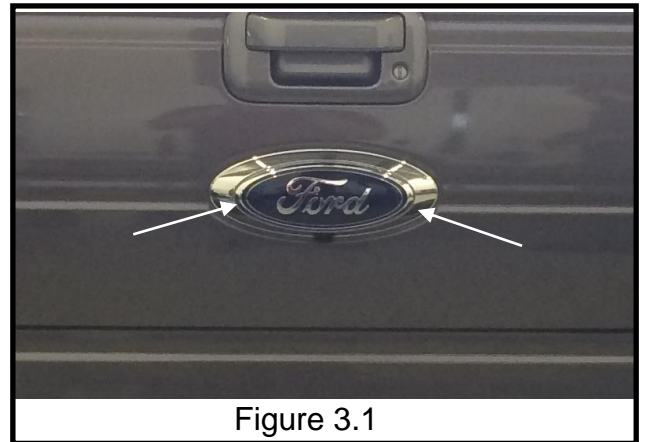


Figure 3.1

Rear Emblem Installation Kit: 92200

1. Gently pry against the smaller part of the emblem shown in figure 3.1. Be careful not to damage either part of the emblem
2. Set the factory emblem off to the side. Prep the new emblem and the truck with the alcohol pad
3. Peel one side of the 3M tape and install it on the emblem. Center on emblem and apply pressure. Figure 3.2 shows an example of properly positioned 3M tape.
4. Remove the other side of the 3M tape from the emblem and position the emblem on the truck. Once the position is finalized, press firmly on the emblem against the truck for 30 seconds.

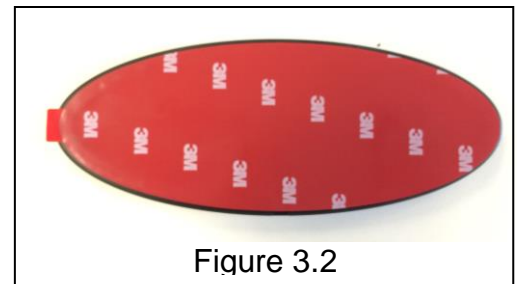


Figure 3.2

Note: PUTCO recommends applying a high quality automotive wax to maintain the original appearance on your new Ford Emblems

LIMITED 90 DAY WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.