

## 2015+ Ford F150 Ford Emblem Installation Instructions

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-247-3974

Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)

Contact your PUTCO dealer for other quality accessories.

**Please read all instructions before installation and to check to see that all parts are included.**


KIT CONTENTS: 92500	
Description	Qty.
Ford Emblem	1
Bolt Kit	1
KIT CONTENTS: 92600	
Ford Emblem	2
Bolt Kit	1

### Tools Needed:


- 8mm & 10mm Wrench
- 7/16" Wrench
- 3/8" Socket and Ratchet
- Pliers
- Flat Head Screw Driver

### Front Emblem Installation


- 1 Remove Emblem from packaging. Check to see if all parts from above table of kit contents are included.

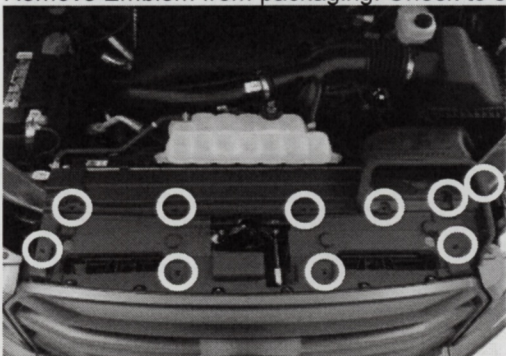


2. With a flat-head screwdriver, remove (10) retaining clips to remove plastic cover. Keep clips and cover (locations shown above).

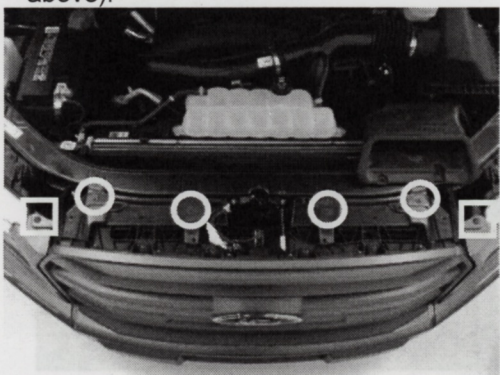

3. Remove and keep the top (4) grille screws with 10mm wrench (location shown by circles) and (2) plastic tree clips with screwdriver (location shown by squares).

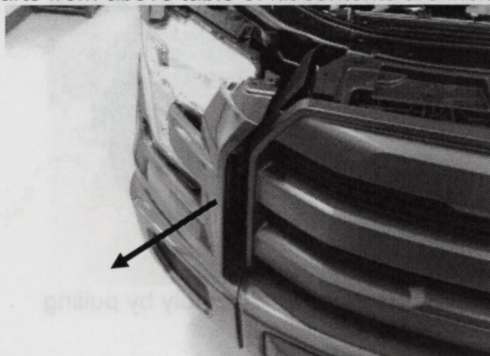

4. Pull out plastic cover around headlight. Passenger side is shown. Repeat on driver side.

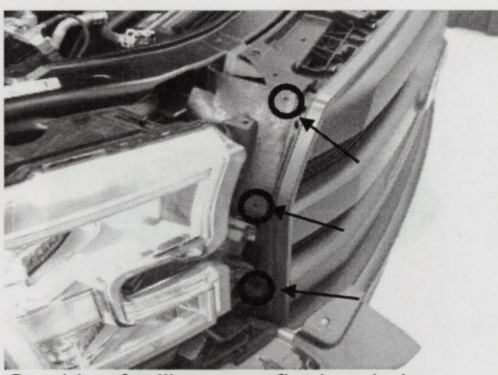


5. On side of grille, use a flat-headed screwdriver to pull out (total 6) tree clips that hold on rubber shield. (keep clips) Passenger side location is shown above. Repeat on driver side


#### LIMITED 90 DAY WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.



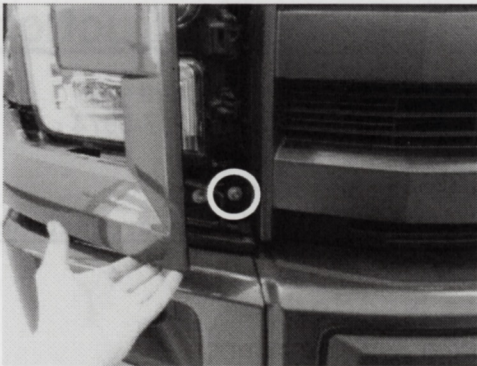


6. Remove and keep (total 2) 8mm bolts securing lower grille to truck. Passenger side location is shown above. Repeat on driver side

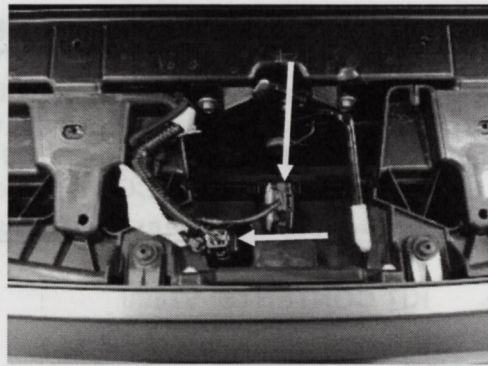


7. Unclip (2) electrical plugs on the top side of the factory grille. Locations shown above.




8. Remove factory grille assembly by pulling grille straight up and out.

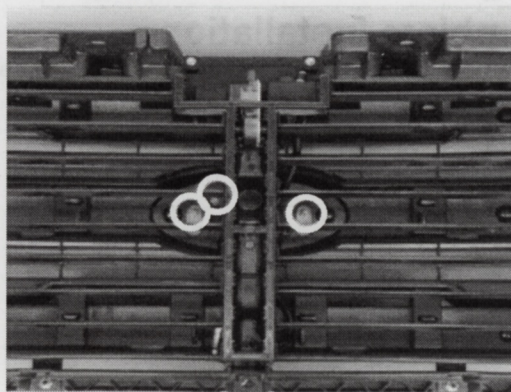

9. Once factory grille assembly is removed from truck; remove the three 10mm nuts from the back of the emblem

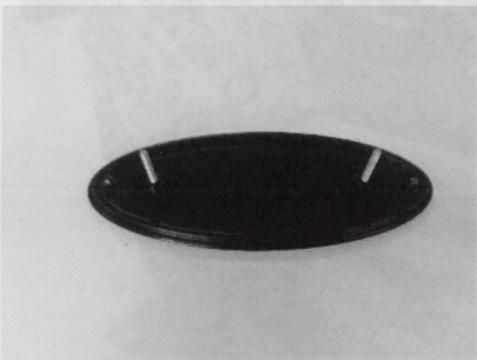

10. Install the provided threaded shafts into the back of the new emblem by hand until the shafts bottom out in the emblem

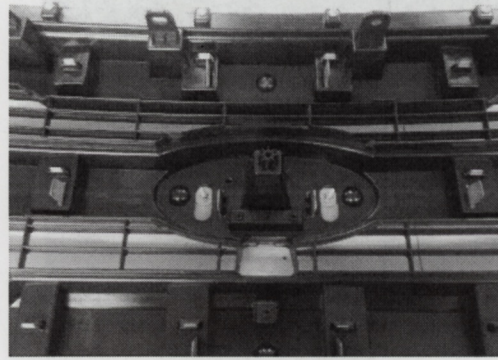

11. Install the emblem into the grill using the included washers and lock nuts. Be careful not to damage the grille from overtightening the fasteners

13. Reassemble the truck following steps 2-8 in reverse order

## LIMITED 90 DAY WARRANTY


Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.






92500,92600

## Rear Emblem Installation

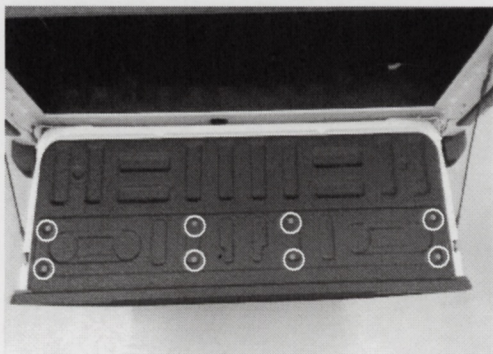

1 Lower tailgate and remove the eight T-30 screws from the access cover

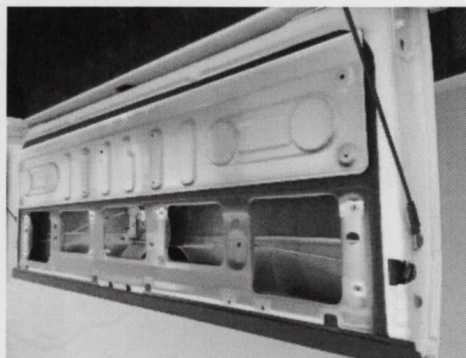


2. Remove access cover




3. Through this area of the tailgate you can gain access to the back of the emblem



4. Pry on the highlighted clips while pulling out on the emblem from the outside

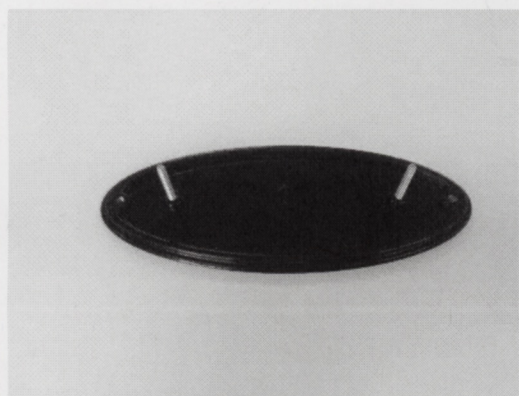

5. Install the provided threaded shafts into the back of the new emblem by hand until the shafts bottom out in the emblem

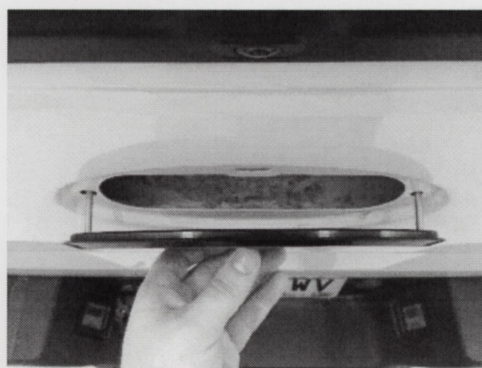

6. Install the emblem into the tailgate using the included washers and lock nuts. Be careful not to overtighten the fasteners and damage the tailgate

7 Reassemble the tailgate by following steps 1-2 in reverse order

**Note: PUTCO recommends applying a high quality automotive wax to maintain the original appearance on your new Ford Emblems**

### LIMITED 90 DAY WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.

9/14/2016-CPH