


**50" Curved L.E.D. Roof Mount Bracket Kit****Vehicle Fitment:****2009-2014 Ford F-150****2010-2014 Ford F-150 SVT Raptor*******READ ALL INSTRUCTIONS FROM START TO FINISH BEFORE INSTALLATION!*****

1. Using templates and lay in rain gutter. Line up with the corner of the windshield.

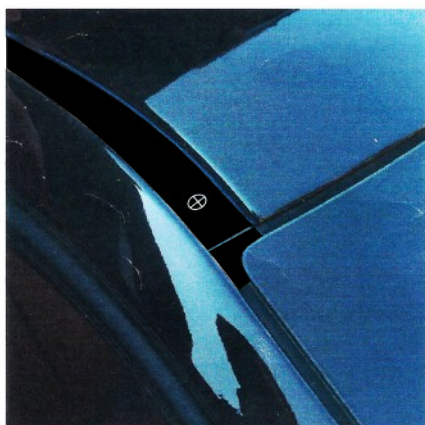

2. Drill marked holes with a pilot drill bit and then work up to a 3/8" drill bit to finish

****NOTE** Start using a 5/64th drill bit and SLOWLY step up in small increments to 3/8"!!!**



3. Insert supplied Grip-Sert into holes. Use tool to fasten Grip-Sert by tightening down the bolt while placing a wrench on the center nut. Do not let Grip-Sert turn while tightening. (Small amount of silicone applied to splined area recommended.)



4. Tighten all Grip-Serts flush to the body.



5. Repeat steps 1-4 on the Driver side.



6. Place rubber gasket between the cab & the bottom of the bracket. Install the 1/4-20 x 3/4" Stainless Steel safety torx bolts & rubber coated washer with supplied driver bit tool. Snug bolts, but do not fully tighten.



7. Bracket should look like this.



8. Install driver side bracket onto LED light bar using light bar hardware.



9. Slide opposite side of light bar into passenger side bracket.



10. Fasten light to passenger side LRM bracket. Drop driver side down and align with holes.



11. Install bolts into bracket and adjust light bar to be level. Torque down all hardware.



12. Route power wire down windshield and wire light bar as noted in light bar instructions. We recommend using some black silicone on the bottom of the wire holding it down in place.