PART# RB-BA1B



ATLAS ROLL BAR

FORD F-SERIES 09+

CHEVY SILVERADO / GMC SIERRA 07+

DODGE RAM 09+

TOYOTA TUNDRA 07+

Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.

Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list

NO.	QTY	NAME	NO.	QTY	NAME
1	1	Roof Rack	2	1	Roll Bar
3	1	Decorative Side Plate (L)	4	1	Decorative Side Plate (R)
5	2	Red Decorative Plate	6	2	Connecting Bracket 1


Page 1 of 3

INSTALLATION INSTRUCTIONS									
7	1	Connecting Bracket 2 (L)	8	1	Connecting Bracket 2 (R)				
9	1	Plate for LED	10	2	Block				
11)	8	Hexagon socket Head Bolt with Washer M6_20	12	8	Flat Washer D6				
13	8	Hex Nut M6	14	2	Socket Cap Screw M8*30				
15)	14	Hex Bolt with Washer M8*25	16	8	Flat Washer D8				
17)	2	Spring Washer D8	18	6	Hex Nut M8				
19	6	Hex Bolt M10_35	20	12	Flat Washer D10				
21)	6	Spring Washer D10	22	6	Hex Nut M10				
23	1	Allen Wrench S=4	24)	1	Allen Wrench S=5				


INSTALLATION INSTRUCTIONS

Installation Steps

Step1: Assemble the roof rack with the roll bar with fasteners.

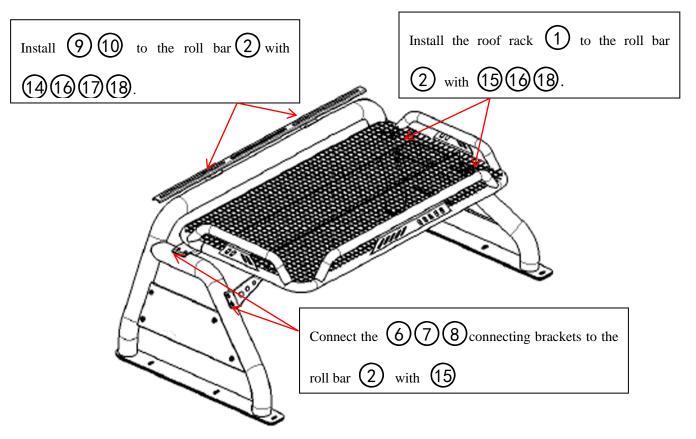

Step2: Place the roll bar to the car to mark the holes as the picture shows. Move away the roll bar and then drill holes with Φ 12mm drilling bit. At last, fix the roll bar with the fasteners (9)(2)(2)(2).

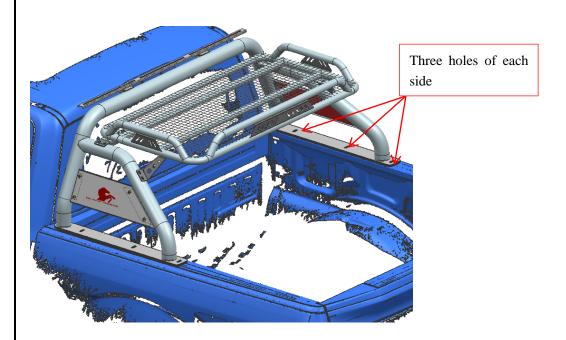

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.