



2015-2017 F150 5.0L Intake Kit

Contents:

- (1) Air Filter
- (1) Intake Pipe
- (1) Heat Shroud/Air Box
- (2) Straight Coupler w/Clamps
- (1) Air Filter Adaptor
- (2) Rubber Strips
- (3) Allen Screws
- (3) Lock Washers
- (3) Flat Washers



Important Notes:

Professional Installation is Highly Suggested.

Tools Needed:

Flat Blade Screw Driver
Ratchet
Sockets (7 & 8mm)

Step 1:



A. Begin by un-doing the clips that attach to the factory air box and slide box back to remove the lid.

B. Loosen the 7mm hose clamp around the throttle body.

C. Slide the tab on the PCV hose and remove.

D. Remove the clip holding the vacuum hose with a flat head screw driver.

Remove Intake tube from the vehicle.

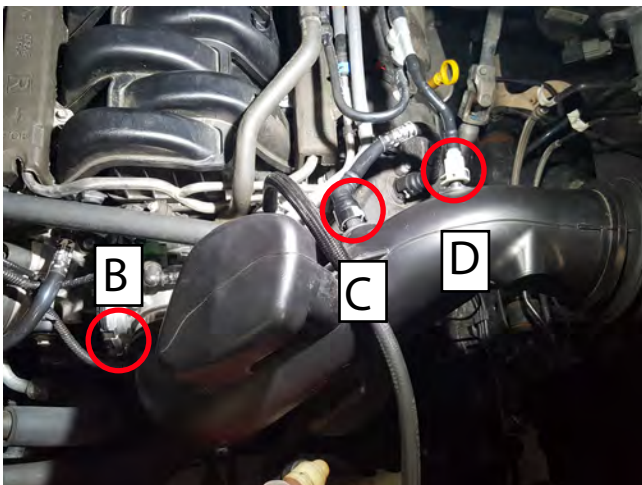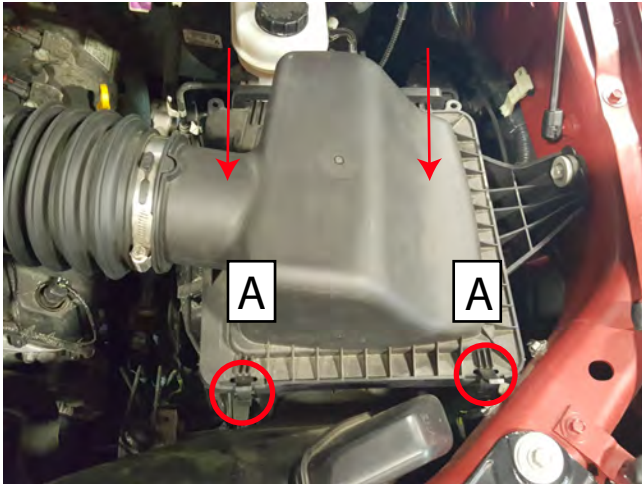

Step 2:

Assemble the air filter adaptor to the air box using the (3) allen screws, and washers.



Step 3:

Mount the air filter to the adaptor and tighten. Then mount the weather-stripping around the top of the air box.



Step 4:

Install the silicone coupler and clamps to air box. Do not tighten fully as intake pipe will need to be adjusted.




Step 5:

Install silicone coupler and hose clamps to the throttle body side of the intake tube. Install the intake and rotate the pipe/couplers to achieve the best fit. Ensure the piping isn't making contact with any other components. Then tighten all clamps.



Step 6:

Re-connect the PCV hose and Vacuum line hose.

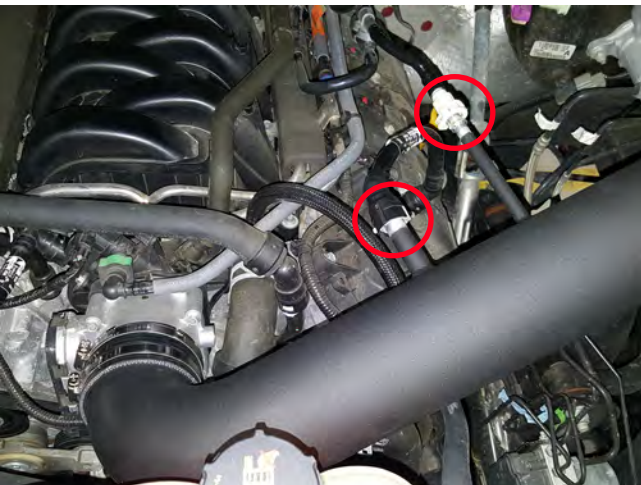

Step 7:

Attach the SR Performance intake to the factory air box by sliding in the tabs, and attaching the clips to hold in place.

