Soft Tri-Fold Tonneau Cover

Contents:

Tools Required:

(1) Tri-Fold Soft Tonneau Cover(4) Bed Rail Clamps

(4) Cotter Pins

- None

Step 1 \\

Place the tonneau cover on the bed of the vehicle. The panel with the yellow safety straps will be closest to the cab of the vehicle.



Step 2\\

Fold the cover out so that it covers the bed of the vehicle. **Note: The cover will lift off the bed rails slightly when not secured to the vehicle. Center the cover to the bed of the vehicle side-to-side and front-to-back.

Step 3\\

Once centered, carefully fold the cover back up to access the latches closest to the cab.



Step 4\\


Adjust the latches as needed for your application. There are several different adjustment slots depending on the application. Use the slot that allow for the best fit. **Note: For Vehicles with utility rails see note at end of install.





Step 5\\

When adjusting the latches, ensure the latch catches the metal on the bed rail. If your vehicle has bed rail covers you may need to trim the cover for best fit.

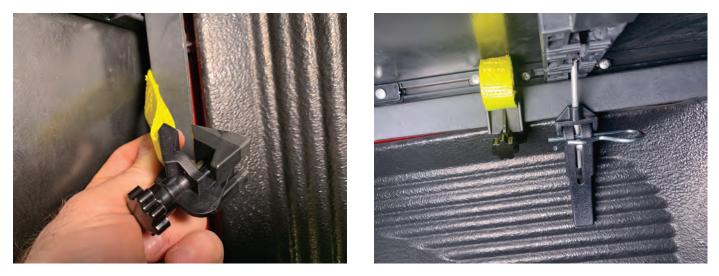

Step 6\\

Tighten the safety latch to the vehicle, loosen the thumb screw and clamp the latch to the vehicle on both sides. Insert the supplied cotter pin to lock the latches in place.





Step 7\\

Fold down the cover and repeat the process for the rear latches.





Toyota and Nissan Trucks with Factory Utility Rails





Utility Rails\\

Remove the rail end caps and install the supplied utility rail clamps. There are several different clamp styles depending on the tonneau cover style. Above are (2) different examples.